



[Service & Support Main](#) | [DC240 Support](#) | [DC280 Support](#)

## KODAK DC240/DC280 Zoom Digital Camera User's Guide

© Eastman Kodak Company, 1999

Kodak and Photolife are trademarks of Eastman Kodak Company.

### Table of Contents

- [Camera Identification](#)
- [Getting Started](#)
  - [Preparing to Take Pictures](#)
  - [Loading Batteries](#)
  - [Turning the Camera On and Off](#)
  - [Checking Batteries](#)
  - [Using the Battery Charger](#)
  - [Using an AC Adapter](#)
  - [Inserting a Camera Memory Card](#)
  - [Removing a Camera Memory Card](#)
  - [Setting the Clock on Your Camera](#)
  - [Adjusting the LCD Brightness](#)
- [Taking Pictures](#)
  - [Previewing a Picture Before It Is Taken](#)
  - [Pressing the Shutter Button](#)
  - [Zooming in on Your Subject](#)
  - [Zooming in Even Closer](#)
  - [Viewing the Picture Just Taken](#)
  - [Setting a Quickview for Each Picture](#)
  - [Setting the Flash](#)
  - [Photographing Distant Subjects](#)
  - [Photographing Close-Ups](#)
  - [Putting Yourself in the Picture](#)
  - [Adding the Date to Your Pictures](#)
  - [Deleting the Picture Just Taken](#)
- [Customizing Your Pictures](#)
  - [Adjusting the Camera Exposure](#)
  - [Adding a Border to Your Picture](#)
  - [Capturing in Black-and-White, Sepia Tone, or Document](#)
  - [Adjusting the Picture Quality](#)
  - [Adjusting the Picture Resolution](#)
  - [Selecting a White Balance for Indoor Pictures](#)
  - [Choosing a Metering System](#)
  - [Adjusting the ISO Setting \(DC280 only\)](#)
  - [Sharpening and Softening a Picture](#)
  - [Locking in an Exposure Setting](#)
- [Reviewing Your Pictures](#)
  - [Viewing Your Pictures](#)
  - [Magnifying Your Pictures](#)
  - [Selecting Pictures for Printing](#)



- o [Cancelling Pictures for Printing](#)
  - o [Protecting Your Pictures](#)
  - o [Deleting One or All of Your Pictures](#)
  - o [Running a Slide Show on Your Television](#)
  - o [Viewing Information About a Picture](#)
- [Personalizing Your Camera](#)
  - o [Setting a Response Beep](#)
  - o [Saving Camera Power](#)
  - o [Viewing Camera Information](#)
  - o [Selecting a Language for the Camera](#)
  - o [Formatting Your Camera Memory Card](#)
  - o [Adjusting the Video Out Signal](#)
  - o [Adjusting the Camera Default Settings](#)
    - [Setting a Border Default](#)
    - [Setting a Flash Default](#)
    - [Setting a White Balance Default](#)
    - [Setting an Exposure Compensation Default](#)
    - [Setting an Effect Default](#)
    - [Setting an Auto ISO Default \(DC280 only\)](#)
- [Installing Your Software](#)
  - o [WINDOWS Computer System Requirements](#)
  - o [MACINTOSH Computer System Requirements](#)
  - o [KODAK Software for WINDOWS Computers](#)
  - o [KODAK Software for MACINTOSH Computers](#)
  - o [Installing the Software](#)
- [Connecting Your Camera](#)
  - o [Using a Serial Cable Connection - WINDOWS Computers](#)
  - o [Using a Serial Cable Connection - MACINTOSH Computers](#)
  - o [Using a USB Cable Connection](#)
  - o [Starting the KODAK Software for WINDOWS Computers](#)
  - o [Starting the KODAK Software for MACINTOSH Computers](#)
  - o [Navigating to Your Pictures](#)
- [Tips](#)
  - o [Connecting with Your Camera](#)
  - o [Communicating with the Computer](#)
  - o [Adjusting Your Monitor for Better Viewing](#)
  - o [Getting Better Results from Your Printer](#)
- [Troubleshooting](#)
- [Where to Get Help](#)
  - o [Software Help](#)
  - o [Faxed Information](#)
  - o [Customer Support](#)
- [Original Camera Default Settings](#)
- [Specifications - DC240](#)
- [Specifications - DC280](#)
- [General Maintenance and Safety](#)
- [Using Your Batteries](#)
- [Regulatory Information](#)

[Home](#) | [Privacy](#) | [Site Terms \(Mar 2007\)](#) | [Investor Center](#)

 
 
 
TAKE PICTURES. FURTHER.™


**Service & Support**
[Service & Support Main](#) | [DC240 Support](#) | [DC280 Support](#) | [Owner's Manual Contents](#)

## KODAK DC240/DC280 Zoom Digital Camera


### User's Guide

### Camera Identification

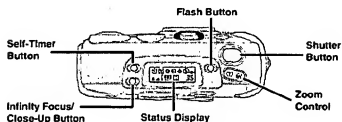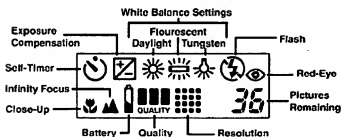
**Camera Front****Camera Top****Status Display****Camera Back**

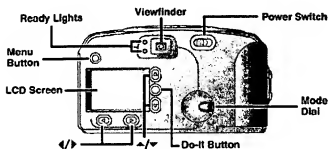 

### Camera Bottom

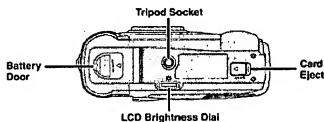 

### Camera Side

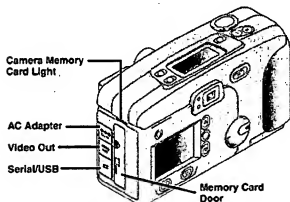 

### Owner's Manual Contents

[Main Table of Contents](#)

[Home](#) | [Privacy](#) | [Site Terms \(Mar 2007\)](#) | [Investor Center](#)

TAKE PICTURES FURTHER™

**Service & Support**
[Service & Support Main](#) | [DC240 Support](#) | [DC280 Support](#) | [Owner's Manual Contents](#)
**KODAK DC240/DC280 Zoom Digital Camera**  
**User's Guide**  
**DC280 Specifications**

| <b>DC280 Camera</b>        |                         |  |
|----------------------------|-------------------------|--|
| <b>Pixel Resolution</b>    | <b>CCD</b>              | 1901 x 1212 = 2.3 millions of pixels (total number of pixels)  |
|                            | <b>High</b>             | 1760 x 1168=2,055,680  |
|                            | <b>Standard</b>         | 896 x 592=530,432  |
| <b>Color</b>               |                         | 24-bit, millions of colors   |
| <b>Picture File Format</b> |                         | Exif version 2.1 (JPEG base)   |
| <b>Picture Storage</b>     |                         | External memory only: ATA compatible CompactFlash card   |
| <b>Viewfinder</b>          |                         | Real image   |
| <b>ASA/ISO Sensitivity</b> |                         | 70   |
| <b>Flash Range</b>         | <b>Wide</b>             | 1.6 ft to 9.8 ft (0.5 to 3.0 m)  |
|                            | <b>TelePhoto</b>        | 1.6 ft to 7.9 ft (0.5 to 2.4 m)  |
| <b>Lens</b>                | <b>Type</b>             | Optical quality glass  |
|                            | <b>Maximum Aperture</b> | <b>Wide:</b> F/3<br><b>TelePhoto:</b> F/3.8  |
|                            | <b>Zoom</b>             | 6X:<br>2X Optical zoom<br>3X Digital zoom  |
|                            | <b>Focal Length</b>     | 30 to 60 mm (equivalent to 35 mm camera)<br>6.5 to 13 mm (actual)  |
|                            | <b>Focus Distance</b>   | <b>Wide/TelePhoto:</b> 1.6 ft (0.5 m) to infinity<br><b>Close-Up:</b> 0.82 ft (0.25 m) to 1.6 ft (0.5 m) |
| <b>Power</b>               | <b>Batteries</b>        | AA size 1.5-volt alkaline, or AA size 1.2-volt Ni-MH rechargeable  |
|                            | <b>DC Input</b>         | AC adapter specified by Kodak  |
| <b>Tripod Socket</b>       |                         | .25 in. (.006 m) threaded  |
| <b>Video Out</b>           |                         | NTSC or PAL  |
| <b>Dimensions</b>          | <b>Width</b>            | 5.2 in. (133 mm)   |
|                            | <b>Length</b>           | 2.0 in. (52 mm)  |
|                            | <b>Height</b>           | 3.0 in. (76 mm)  |
| <b>Weight</b>              |                         | 12.1 oz (342 g) without batteries  |

**Operating Temperature**

**32 to 104° F (0 to 40° C)**

---

**Owner's Manual Contents**

Main Table of Contents

[Home](#) | [Privacy](#) | [Site Terms \(Mar 2007\)](#) | [Investor Center](#)